

 
CD_N7+N10

Holder for CD slot/
Holder til CD indgang

> iPad mini/Tablet
5.5"-8.9"



> iPad/Tablet
8.9"-11"

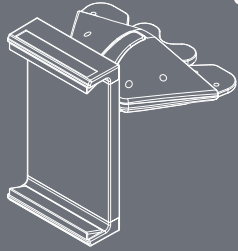


USER GUIDE/
BRUGERMANUAL

MOBILINE+ Exclusive

MOBILINE+ Exclusive
FEATURES_HIGH PERFORMANCE ^ COMPATIBLE WITH
IPAD/MINI/TABLET ^ 5.5"-8.9" / 8.9"-11"


Size/
Mål

 CD_N7

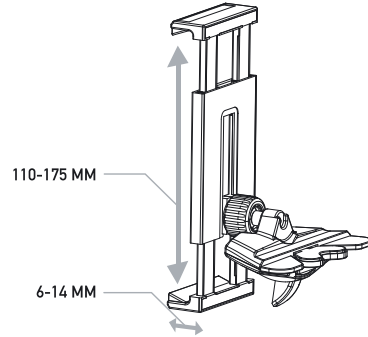


Size/
Mål

 CD_N10

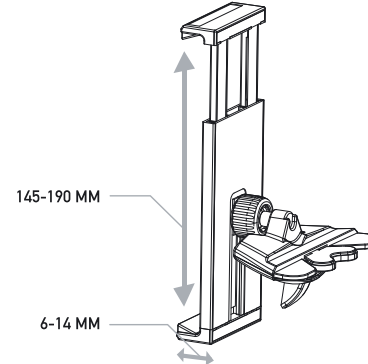


Component/
Komponenter

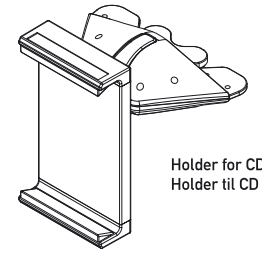 

Holder for CD slot/
Holder til CD indgang



 User guide/
Brugermanual




Sub pads/
Gummiadapter/
3 pcs./stk


Features/
Funktion

Features/
Funktion

 
Features/
Funktion

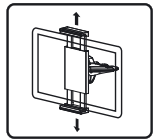

 
Easy spring
holder mount/
Fjederbelastet holder

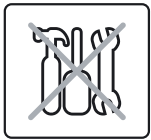


Easy mount/
Nem at montere

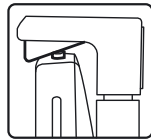 

 
Designed to prevent
key press/
Design, der undgår
at aktivere knapper

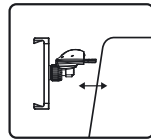

 
Remove and reset/
Fjernes nemt fra
CD indgang

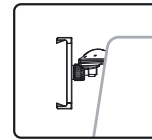

 
CD slot mount/
Holder monteres
i CD indgang

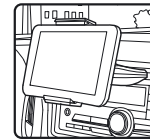

 While holder is mounted,
inside CD can still be played/
Indvendig CD kan stadigvæk
afspilles mens holder
er monteret

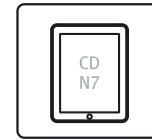


 5.5"-8.9"
iPad mini/Tablet

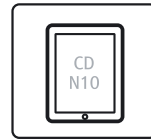


8.9"-11"
iPad/Tablet

 Parts/
Dele

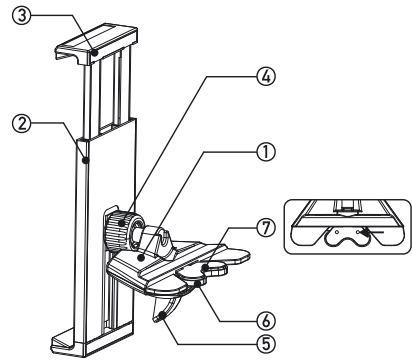


- ① Body/ Konsol ② Holder/ Holder ③ Spring holder/ Fjederbelastet holder ④ Locking bolt/ Låsebolt ⑤ Locking lever/ Låsetap ⑥ Locking wing/ Låsegreb ⑦ Sub pad hole/ Plade for gummiadapter

 
How to use sub pad/
Sådan benytter du en gummiadapter

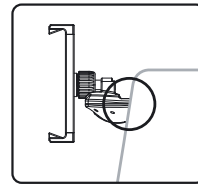

 - > Use sub pad when locking wing is loose in the CD slot
- > Benyt en gummiadapter, når låsegrebet sidder løst i CD indgangen

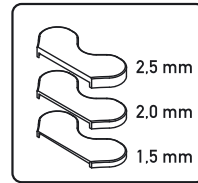


 - > There are three types of sub pad thickness 1.5/2.0/2.5 mm
- > Der medfølger 3 gummiadaptere i tykkelse: 1.5/2.0/2.5 mm

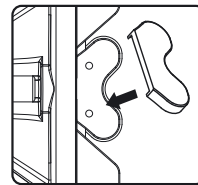


- > Insert the appropriate sub pad to the sub pad hole on the locking wing
- > Sæt passende gummiadapter på pladen på låsegrebet

 How to install/
Sådan monteres holderen

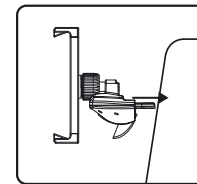


 - > Insert the locking wing of the product to the CD slot
- > Indfør låsegreb i CD indgangen

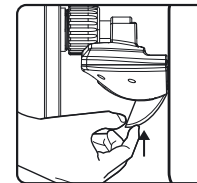


- > Press the locking lever and fasten the locking wing in the CD slot
- > Tryk på låsetappen for at fastgøre låsegreb i CD indgang

 
How to mount iPad/Tablet/
Sådan monteres din iPad/Tablet

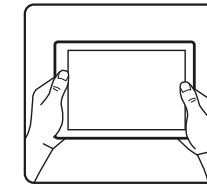

 - > Hold the iPad/Tablet with both hands
- > Hold din iPad/Tablet fast med begge hænder

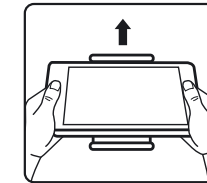


 - > Push up the spring holder with the iPad/Tablet
- > Tryk din iPad/Tablet mod den fjederbelastede holder

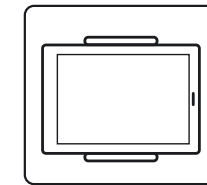


- > Put the iPad/Tablet into the holder and mount it
- > Skub din iPad/Tablet på plads i holder

 
Adjustment/
Justeringer

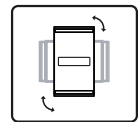


360° Adjustable/
Justerbar

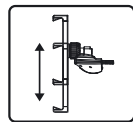 

 Easy to adjust height/
Justeres nemt i højden

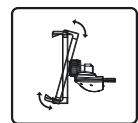


Tilting function/
Justerbar vinkel

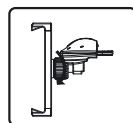 


Turn the locking lever clockwise to adjust up and down/
Drej låsebollen med uret, for at justere holder op/ned

 Caution/
Advarsel

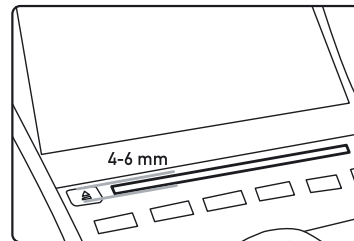

- > Installation is possible from 4-6 mm gap of the CD slot entrance
- > Montering er muligt i CD indgange på mellem 4-6 mm

 Caution/
Advarsel

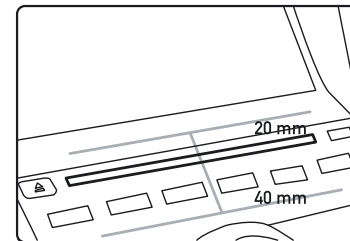

- > 20 mm upward and 40 mm downward from the CD slot is necessary to be installed
- > Ved montering vil konsollen dække 20 mm ovenfor og 40 mm nedenfor CD indgang